

## BellaBot--Quick User Guide

1. **Power on/off:** Long-press for 3s at the Starting point (note orientation) or under Marker to turn on/off.




2. **Charging:** Please charge the robot or replace the battery promptly if the power level is below 10%.



3. **Delivery:** Choose table number and click Start to deliver.



4. **Cruise Mode:** Please select the route to cruise.

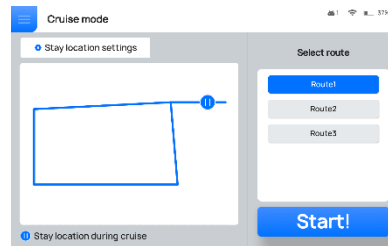


5. **Direct delivery:** One arrival point and one-way delivery.




6. **Guiding:** AI interactions, guiding, or go to greeting point.



7. **Birthday:** To deliver cakes and gifts with the Birthday Song.

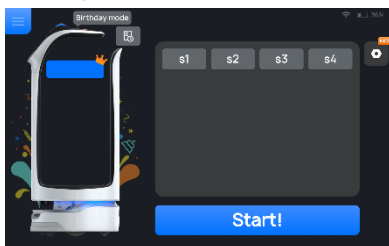


8. **Special mode:** For special scenes like wedding proposal, deliver with special music and words.

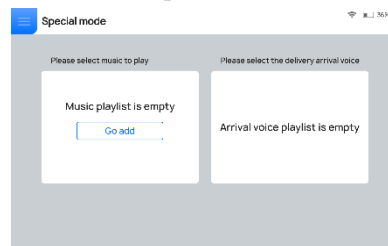

9. **Pause:** Click screen or press the function-button to pause.



10. **Setting:** To change language, maps, speed and volume.

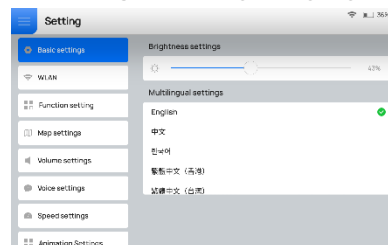

11. **Emergency stop:** Press the red button on the top to stop the robot immediately and restore by rotation and ejection.

12. Do not deliver liquid dishes, such as soups and hot pot, which may spill liquids and cause other accidents.

13. Do not block the robot while it is moving, so as to avoid safety accidents.

14. Do not obscure the radar, RGBD or Marker camera with any foreign objects.

15. Please designate a person responsible for charging the robot strictly regulating the charging operation.

16. Please keep the robot dry and at room temperature for storage and charging. Do Not charge at >40°C and avoid water.